



REPLACEMENT PARTS - PREMIER V ®	
PART #	DESCRIPTION
12239	WALL WIDTH EXTENSION - 9/16" (SOLD PER FOOT OF EXTENSION)
12240	WALL WIDTH EXTENSION - 1 9/16" (SOLD PER FOOT OF EXTENSION)
12241	WALL WIDTH EXTENSION - 2" (SOLD PER FOOT OF EXTENSION)
12234	TOP HEAD SILL TRACK (SOLD PER FOOT OF EXTENSION)
12236	BOTTOM SILL TRACK (SOLD PER FOOT OF EXTENSION)
15314	3012 SCREEN ONLY
15315	3016 SCREEN ONLY
15316	3020 SCREEN ONLY
15317	3024 SCREEN ONLY
15328	3030 SCREEN ONLY
15322	3036 SCREEN ONLY
15329	3040 SCREEN ONLY
15318	3616 SCREEN ONLY
15319	3620 SCREEN ONLY
15320	3624 SCREEN ONLY
15323	4036 SCREEN ONLY
15324	4040 SCREEN ONLY
15327	4050 SCREEN ONLY
15330	5030 SCREEN ONLY
15325	5040 SCREEN ONLY
15326	5050 SCREEN ONLY



REPLACEMENT PARTS - PREMIER V ®		
PART # LOW E	PART # CLEAR	DESCRIPTION
70329	70303	3016 FIXED SLIDER SASH WITH KEEPER
70331	70305	3020 FIXED SLIDER SASH WITH KEEPER
N/A	70307	3024 FIXED SLIDER SASH WITH KEEPER
70343	70317	3036 FIXED SLIDER SASH WITH KEEPER
70345	70319	4036 FIXED SLIDER SASH WITH KEEPER
70347	70321	4040 FIXED SLIDER SASH WITH KEEPER
70417	70512	4050 FIXED SLIDER SASH WITH KEEPER
70508	70514	5030 FIXED SLIDER SASH WITH KEEPER
70349	70323	5040 FIXED SLIDER SASH WITH KEEPER
70351	70325	5050 FIXED SLIDER SASH WITH KEEPER
70328	70302	3016 OPERATOR SLIDER SASH WITH LOCK
70330	70304	3020 OPERATOR SLIDER SASH WITH LOCK
70332	70306	3024 OPERATOR SLIDER SASH WITH LOCK
70342	70316	3036 OPERATOR SLIDER SASH WITH LOCK
70344	70318	4036 OPERATOR SLIDER SASH WITH LOCK
70346	70320	4040 OPERATOR SLIDER SASH WITH LOCK
70416	70511	4050 OPERATOR SLIDER SASH WITH LOCK
70507	70513	5030 OPERATOR SLIDER SASH WITH LOCK
70348	70322	5040 OPERATOR SLIDER SASH WITH LOCK
70350	70324	5050 OPERATOR SLIDER SASH WITH LOCK
70396	70390	3016 COMPLETE SASH AND SCREEN SET
70397	70391	3020 COMPLETE SASH AND SCREEN SET
70398	70392	3024 COMPLETE SASH AND SCREEN SET
N/A	70384	3036 COMPLETE SASH AND SCREEN SET
70399	70393	4040 COMPLETE SASH AND SCREEN SET
70435	70404	4050 COMPLETE SASH AND SCREEN SET
N/A	70506	5030 COMPLETE SASH AND SCREEN SET
70400	70394	5040 COMPLETE SASH AND SCREEN SET
70401	70395	5050 COMPLETE SASH AND SCREEN SET



REPLACEMENT PARTS - VINYL PRO™		
PART #		DESCRIPTION
15400		1512 SCREEN ONLY
15401		1516 SCREEN ONLY
15402		1520 SCREEN ONLY
15405		2630 SCREEN ONLY
15406		3020 SCREEN ONLY
15407		3030 SCREEN ONLY
15408		3036 SCREEN ONLY
15409		3040 SCREEN ONLY
15410		4036 SCREEN ONLY
15411		4040 SCREEN ONLY
15413		4050 SCREEN ONLY
15414		5040 SCREEN ONLY
15415		5050 SCREEN ONLY
15416		6040 SCREEN ONLY
PART # LOW E	PART # CLEAR	DESCRIPTION
87260	87240	1512 OPERATING SASH
87261	87241	1516 OPERATING SASH
87262	87242	1520 OPERATING SASH
87121	87081	2630 OPERATING SASH
87122	87082	3020 OPERATING SASH
87123	87083	3030 OPERATING SASH
87124	87084	3036 OPERATING SASH
87125	87085	3040 OPERATING SASH
87126	87086	4036 OPERATING SASH
87127	87087	4040 OPERATING SASH
87128	87088	4050 OPERATING SASH
87129	87089	5040 OPERATING SASH
87130	87090	5050 OPERATING SASH
87131	87091	6040 OPERATING SASH
REPLACEMENT PARTS - POUR MOLD		
PART # LOW E	PART # CLEAR	DESCRIPTION
70366	70365	3216 PF OPERATING SASH
70370	70369	3216 OPERATING SASH
70362	70361	3220 PF OPERATING SASH
70358	70357	3220 OPERATING SASH
70354	70353	4040 OPERATING SASH