

MONARCH

Materials Group Inc.

LADDER


Egress Escape Ladder

End User Notes: (Read the instructions completely before installing the windows).

- It is the responsibility of the owner, architect and/or builder to select products that comply with applicable laws, egress and local building codes that are appropriate to the intended application and use.
- Contact the nearest Monarch Materials Group sales representative if there are any problems.

Tools Needed:

- 4 quantity - #12 stainless steel, self-drilling screws with attached bonded seal washers
- Impact driver with appropriate Hex bit

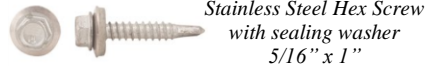

IRC Code:

- Window wells with a vertical depth greater than 44 inches (1.1m) shall be equipped with a permanently affixed ladder. The ladder must project at least 3 inches from the side of the well, but no more than 6 inches. Monarch ladders meet the IRC Code.

Instructions:

- Place the Monarch Steel Exit Ladder in desired position within the well. Attach the Exit Ladder using self-tapping screws inserted into the pre-drilled existing holes at the top and bottom of the ladder (4 total) with an impact driver.